

WIRELESS CCTV

SUPPORT GUIDE: Removing Default Password on a Mini Dome



Originated by:
Robert Hawkins
Production Manager

Validated by:
Simon Potkins
Chief Technology Officer

Date: 18/05/2010
Tel: 01706 63 11 66
Email: support@wcctv.co.uk

Wireless CCTV Ltd,
Charles Babbage House,
Kingsway Business Park,
Rochdale, OL16 4NW

Removing a Default Password on a Mini Dome

Password for the mini dome is 555555.

To select the number 5, use the 'F+' button located on the right hand side of the screen.

To remove the password, select dome menu.

Select System Menu.

Select password enable, and turn off.

Save the settings, exit the menu.