

# WIRELESS CCTV

## SUPPORT GUIDE: How to Set a Home Position on a 4G Mini Dome



**Originated by:**  
**Emma Buckley**  
Customer Support Co-Ordinator

**Validated by:**  
**Daniel del Soldato**  
Marketing Manager

Date: Tuesday, 30 April 2019  
Tel: 01706 63 11 66  
Email: [support@wcctv.com](mailto:support@wcctv.com)

Wireless CCTV Ltd, Charles  
Babbage House, Kingsway  
Business Park, Rochdale,  
OL16 4NW




## How to Set a Home Position on a 4G Mini Dome

On a 4G Mini Dome, you will find that you are able to select a Home Position. This means once the camera is left idle for a set period of time, it will automatically go back to the home position you have set.

To set the Home Position, you will need to make sure that you have set all presets/tours required


To access the Dome Menu, please select the bottom drop down menu and select **Dome Menu**

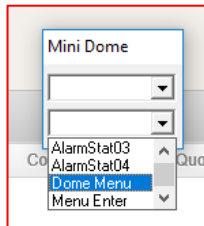

Using your arrows on screen, move down to **Dome Setup** and use your **Z+** button to select



Using your arrow on screen, move down to **Home Function Setup** and use your **Z+** button to select

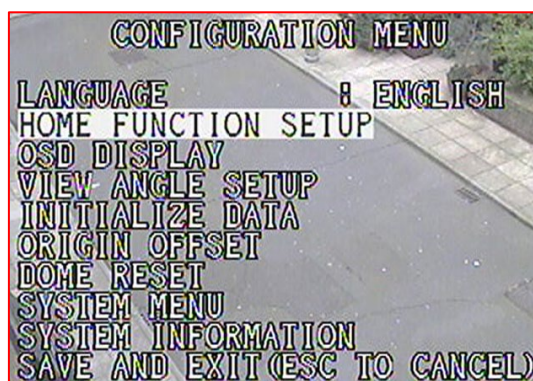

Select the **Z+** button until the function you want as your Home Position is showing. Using your arrow on screen, move down to **Function Enable** and use your **Z+** button to select **On**

Select **Save And Exit** until you are back to the original home screen.

*You can test the Home Function by moving the camera and making sure it reverts back into the chosen preset/tour*