

WIRELESS CCTV

SUPPORT GUIDE: Setting Presets on a 4G Mini Dome



Originated by:
Emma Buckley
Customer Support Co-Ordinator

Validated by:
Daniel del Soldato
Marketing Manager

Date: Tuesday, 30 April 2019
Tel: 01706 63 11 66
Email: support@wcctv.com

Wireless CCTV Ltd, Charles
Babbage House, Kingsway
Business Park, Rochdale,
OL16 4NW




Setting Presets on a 4G Mini Dome

Presets are put in place to allow you to save certain views on the camera. The presets can then be used to create a patrol/tour of the area.

To set a preset on a 4G Mini Dome, you will need to firstly choose the view you would like to use (make sure you have loaded the PTZ Controls).

Select the top drop down box and select **Set Pre 01**

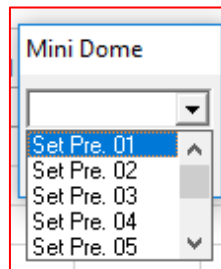

If the system asks for a password use **555555** by selecting the numbers with the **Z+** command

You will need to repeat this process for each preset position that needs to be set.

If a pop up shows up stating **There is a programmed data. Do you want to overwrite**, select **Yes** (using the on screen arrows to move left/right and the **Z+** button to select)

